FlexTop 2202 Temperature Transmitter

4...20 mA transmitter for Pt100 sensors

2-, 3- or 4-wire sensors Accuracy better than 0.25°C Sensor offset correction Automatic/configurable cable resistance compensation (2-wire) Sensor error detection 2-way configuration Configurable damping and status indication Engineering unit °C or °F PC datalogging **Excellent temperature stability** Ex ia IIC T5/T6, ATEX II 1G



Description

FlexTop 2202 is a 4...20 mA loop-powered transmiter for Pt100 sen sors.

Either 2-, 3- or 4-wire sensors can be used. For 2-wire sensors an automatic balancing of the sensor cable resistance is possible with shorted sensor cable. The cable resistance can be manually configured as well.

Using a PC, the Windows-based Flex-Program and a FlexProgrammer configuring unit, the following parameters can be configured via the output connectors (2-way communication): TAG no., number of wires, cable resistance, error detection level, measuring range/unit, damping, offset and status indication.

The Flex-Program has a datalogging facility enabling the user to moni tor measuring results or calibrate the measuring setup.

FlexTop 2202 is embedded in silicone which makes it resistant to humid environments.

FlexTop 2202, fitting into the DIN B housing, has a 6 mm center hole for quick sensor replacement. The spring loaded mounting screws ensure a safe fastening even in vibrating environments.

Authorised Dealer



B-501/504, 5th floor, Raunak Arcade, Near THC Hospital, Gokhale Road, Naupada, Thane(W) 400602. Maharashtra INDIA E-Mail: sales@nkinstruments.com Skype: nitinkelkarskype

Instruments I-Telefax Nos.: 91-22-25301330 / 31 / 32 Web: http://www.nkinstruments.com Gtalk: nkinstruments2006



Technical Data

Input		Environmental conditions	
Accuracy		Operating temperature -4085°C	
Span_< 250°C:	< 0.25°C {2}	Storage temperature	-5590°C
Span > 250°C:	0.1% of span	Humidity	< 98% RH, cond. (IEC 68-2-38)
Sample time	< 0.7 sec.	Vibrations	GL, test 2 (IEC 68-2-6)
Pt100 Standard	IEC/DIN/EN 60 751-2	Long-term test	IEC 770 6.3.2
RTD measuring current 0.3 mA, continuously		EMC data	
Sensor type	2-, 3- or 4-wires {1}	Generic standards	EN 61000-6-3, EN 61000-6-2
Sensor short detection	on < -225°C	Product standards	EN 61326
Sensor break detection > 875°C		NAMUR	NAMUR NE21
Error detection delay	< 10 sec.		
Compensation for		Approval	Ex ia IIC T5/T6, ATEX II 1G
cable error	< 0.02°C/Ohm (3-wire)	Supply range	828 \/
Cable resistance	Max. 20 Ohm /wire {1}	Internal inductivity	L ≤ 10 μH
Measuring range	-200850°C {1}	Internal capacity	$C_i \leq 10 \text{ nF}$
Measuring unit	°C or °F {1}	Barrier data	< <u>U</u> 28 ¼; I≤ 0.1 A ; <u>P</u> < 0.7 W
Minimum span Protection	25°C	Temperature class	T1T5: -40 < T < 85°C T6: -40 < T < 50°C
	+/- 35 ½ 50 and 60 Hz		10
Suppression Resolution	14 bit	Mechanical data	
Repeatability	< 0.1°C	Dimensions	ø44 x 19 mm
Ripple immunity	EC 770 6.2.4.2	Protection class	Housing: IP 40
Offset Adjustment	Max. + 10°C {1}	Other data	
-	100 100 1	Temperature drift	Typ. 0.003% per °C
Output			Max. 0.01% per °C
Signal span	420 mA, 2-wire	Power-on time	10 sec.
Accuracy	< 0.1% of signal span	Test conditions	
Supply range	835 ½	Configuration	0100°C
Ripple immunity	3 V _{ms}	Amb. temperature	23°C +/- 2°C
Load equation	R(V 8)/23 [kOhm]	Power supply	24 VDC
Up/Down scaling limi		Disposal of product	t and packing
Damping	030 sec. {1}	According to national laws or by returning to Baumer	
Protection	Reversed polarity protection		
Resolution	12 bit	Notes	Carfinunghla
Effect of variations in s		{1}	
Output current	0.01% per volt	{2}	Lower range limit < 100°C
TAG No.	15 characters {1}		
Measuring Par			

Measuring Ranges

Туре	
Pt100	
Lin. resistance	

Range -200...850°C {2} DIN/EN/IEC 60751 0...500 Ohm

Min. span 25°C 5 Ohm


Accuracy 0.25°C 1 Ohm

Ordering details - FlexTop 2202

Standard

		2202 000x (x)
Туре	8´ Digit	
Not configured, standard safety		1
Not configured, Ex ia IIC T5/T6, ATEX II 1G		2
Not configured, Ex nA II T5, ATEX II 3G		3
Configuration	9´ Digit	
Configuration accordin	С	

Non-Ex Application

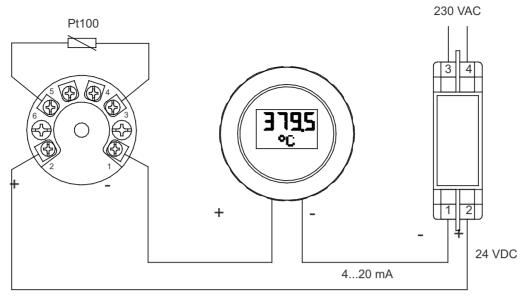


FlexTop 2202


FlexView

Power supply

Ex Application

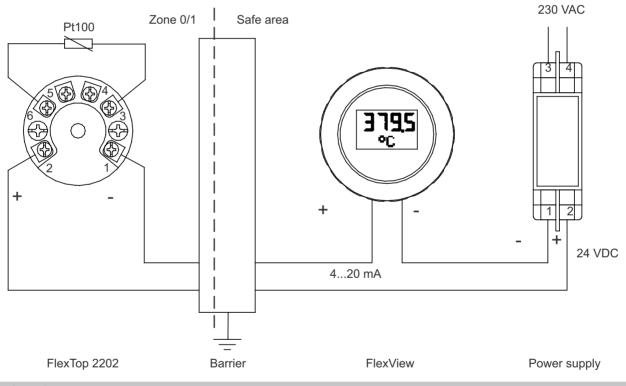

Configuration

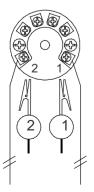

Note: Disconnect loop supply before connecting the FlexProgrammer

to FlexTop 2202.

Electrical Installation

