FlexTop 2202 Temperature Transmitter

4...20 mA transmitter for Pt100 sensors

2-, 3- or 4-wire sensors
Accuracy better than 0.25°C
Sensor offset correction
Automatic/configurable cable resistance compensation (2-wire)
Sensor error detection
2-way configuration
Configurable damping and status indication
Engineering unit °C or °F
PC datalogging
Excellent temperature stability
Ex ia IIC T5/T6, ATEX II 1G



Description

FlexTop 2202 is a 4...20 mA loop-powered transmiter for Pt100 sen sors.

Either 2-, 3- or 4-wire sensors can be used. For 2-wire sensors an automatic balancing of the sensor cable resistance is possible with shorted sensor cable. The cable resistance can be manually configured as well.

Using a PC, the Windows-based Flex-Program and a FlexProgrammer configuring unit, the following parameters can be configured via the output connectors (2-way communication): TAG no., number of wires, cable resistance, error detection level, measuring range/unit, damping, offset and status indication.

The Flex-Program has a datalogging facility enabling the user to moni tor measuring results or calibrate the measuring setup.

FlexTop 2202 is embedded in silicone which makes it resistant to humid environments.

FlexTop 2202, fitting into the DIN B housing, has a 6 mm center hole for quick sensor replacement. The spring loaded mounting screws ensure a safe fastening even in vibrating environments.

Technical Data

| Input | | Environmental conditions | | |
|--|--|--|--|--|
| Accuracy | | Operating temperature -4085°C | | |
| Span_< 250°C: | < 0.25°C {2} | Storage temperature | -5590°C | |
| Span > 250°C: | 0.1% of span | Humidity | < 98% RH, cond. (IEC 68-2-38) | |
| Sample time | < 0.7 sec. | Vibrations | GL, test 2 (IEC 68-2-6) | |
| Pt100 Standard | IEC/DIN/EN 60 751-2 | Long-term test | IEC 770 6.3.2 | |
| RTD measuring current 0.3 mA, continuously | | EMC data | | |
| Sensor type | 2-, 3- or 4-wires {1} | Generic standards | EN 61000-6-3, EN 61000-6-2 | |
| Sensor short detection < -225°C | | Product standards | EN 61326 | |
| Sensor break detection > 875°C | | NAMUR | NAMUR NE21 | |
| Error detection delay | < 10 sec. | | | |
| Compensation for | | Approval | Ex ia IIC T5/T6, ATEX II 1G | |
| cable error | < 0.02°C/Ohm (3-wire) | Supply range | 828 ½ | |
| Cable resistance | Max. 20 Ohm /wire {1} | Internal inductivity | L ₁ ≤ 10 μH | |
| Measuring range | -200850°C {1} | Internal capacity | C ₁ ≤ 10 nF | |
| Measuring unit | °C or °F {1} | Barrier data | 28 ½; I≤ 0.1 A ; _₽0.7 W | |
| Minimum span | 25°C | Temperature class | T1T5: $-40 < T_{amb} < 85^{\circ}C$ T6: $-40 < T_{amb} < 50^{\circ}C$ | |
| Protection | +/- 35 V | | 10 | |
| Suppression | 50 and 60 Hz | Mechanical data | | |
| Resolution | 14 bit < 0.1°C | Dimensions | ø44 x 19 mm | |
| Repeatability Ripple immunity | EC 770 6.2.4.2 | Protection class | Housing: IP 40 | |
| Offset Adjustment | | Other data | | |
| Output | l <u>M</u> at0°C {1} | Temperature drift | Typ. 0.003% per °C Max. 0.01% per °C | |
| Signal span | 420 mA, 2-wire | Power-on time | 10 sec. | |
| Accuracy | < 0.1% of signal span | Test conditions | | |
| Supply range | 835 ¥ | Configuration | 0100°C | |
| Ripple immunity | 3 V_ms | Amb. temperature | 23°C +/- 2°C | |
| Load equation | <u>≰</u> (V _{cc} - 8)/23 [kOhm] | Power supply | 23 C +/- 2 C 24 VDC | |
| Up/Down scaling limi | | | | |
| Damping | 030 sec. {1} | Disposal of product and packing | | |
| Protection | Reversed polarity protection | According to national laws or by returning to Baumer | | |
| Resolution | 12 bit | Notes | | |
| Effect of variations in s | upply voltage: | {1} | Configurable | |
| Output current | 0.01% per volt | {2} | Lower range li <u>m</u> it < 100°C | |
| TAG No. | 15 characters {1} | | | |
| | | | | |


Measuring Ranges

| Туре | Standard | Range | Min. span | Accuracy |
|-----------------|------------------|---------------|-----------|----------|
| Pt100 | DIN/EN/IEC 60751 | -200850°C {2} | 25°C | 0.25°C |
| Lin. resistance | | 0500 Ohm | 5 Ohm | 1 Ohm |

Ordering details - FlexTop 2202

| | | 2202 000x (x) |
|---|----------|---------------|
| Туре | 8´ Digit | |
| Not configured, standard safety | | 1 |
| Not configured, Ex ia | 2 | |
| Not configured, Ex nA II T5, ATEX II 3G | | 3 |
| Configuration | 9´ Digit | |
| Configuration accordi | С | |

Non-Ex Application

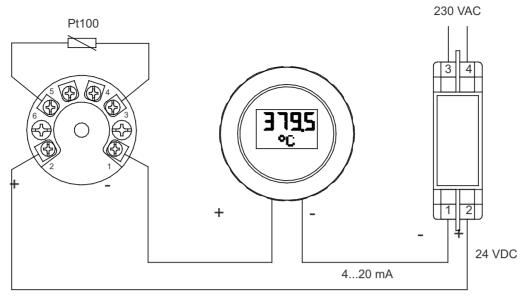


FlexTop 2202


FlexView

Power supply

Ex Application

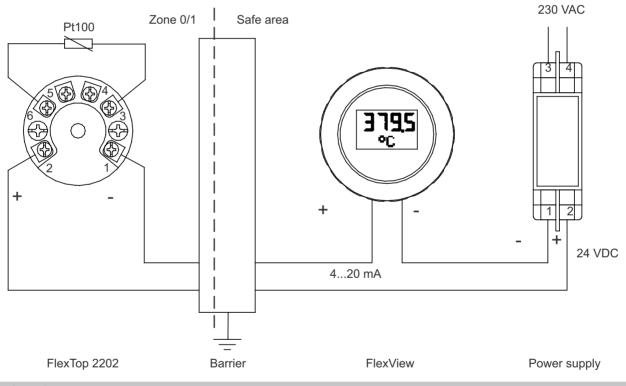


Configuration

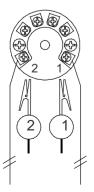

Note: Disconnect loop supply before connecting the FlexProgrammer

to FlexTop 2202.

Electrical Installation

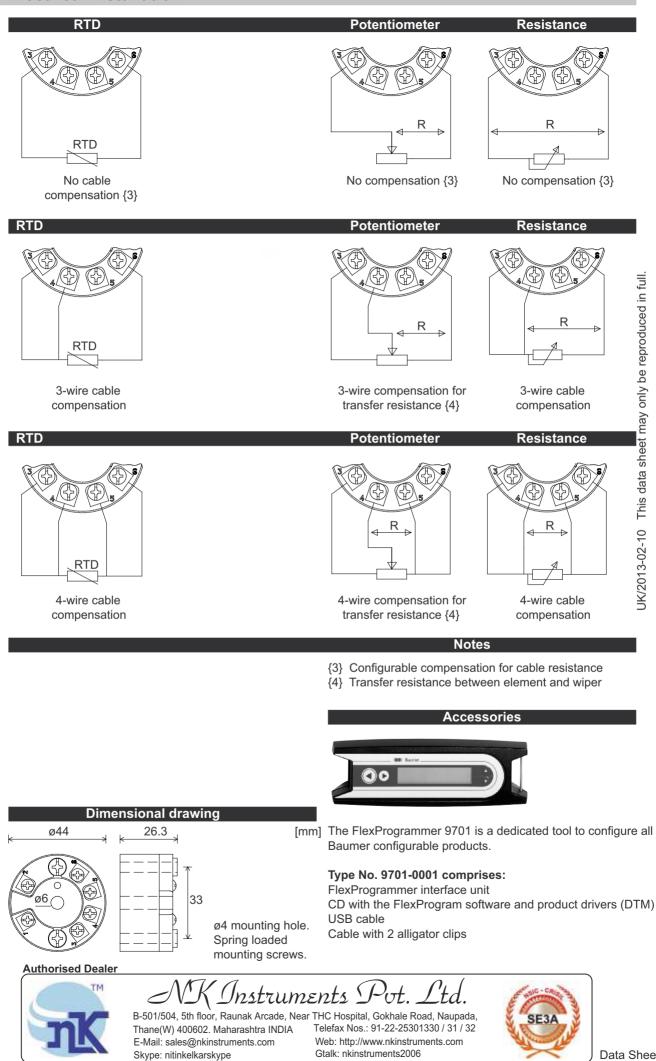

Design and specifications subject to change without notice

Data Sheet 2202-1 Page 4